

Apps to make Cabinet Vision work for you.

Autoshape Corner 90 Parts - Package Import

💡 Contents of this Article...

- Alert - Start with a backup
- Extract the download
- Open Setup Package Utility and import the package


❗ Before you get started is a great time to back up your Cabinet Vision files...

- If something doesn't go exactly to plan you'll be able to start over
- Take a look at our ScreenSteps on the [Backup Utility](#)

Our next step is to Unzip the download


1. Right click > Extract All
2. Un-check "Show extracted files when complete"
3. Extract

💡 An easy way is to place a copy of the zip file into your job folder > Right Click and 'Extract All'

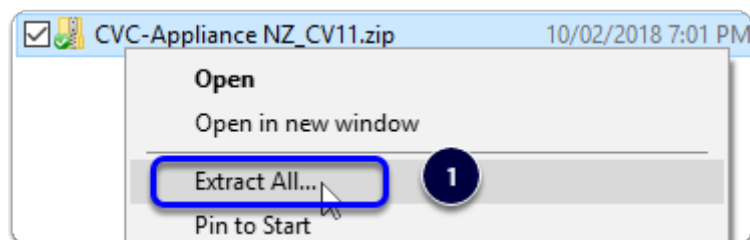


Apps to make Cabinet Vision work for you.

Autoshape Corner 90 Parts - Package Import

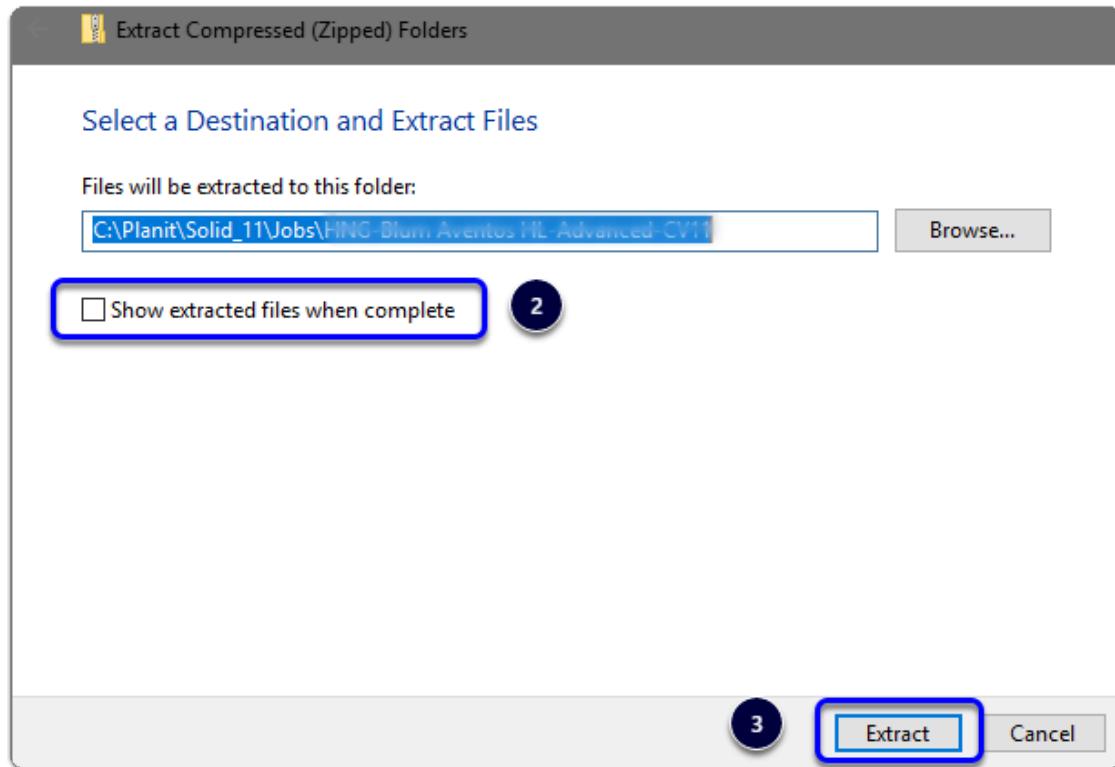




We're ready to import the package into Cabinet Vision > Splash Screen > Utilities > Setup Utility

1. Open the package
2. Switch to import mode - Swap between Creation and Import Modes
3. Overwrite all Matches
4. Import Package Contents
5. Click OK

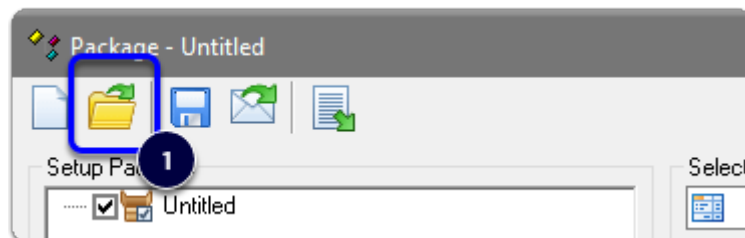


Apps to make Cabinet Vision work for you.

Autoshape Corner 90 Parts - Package Import

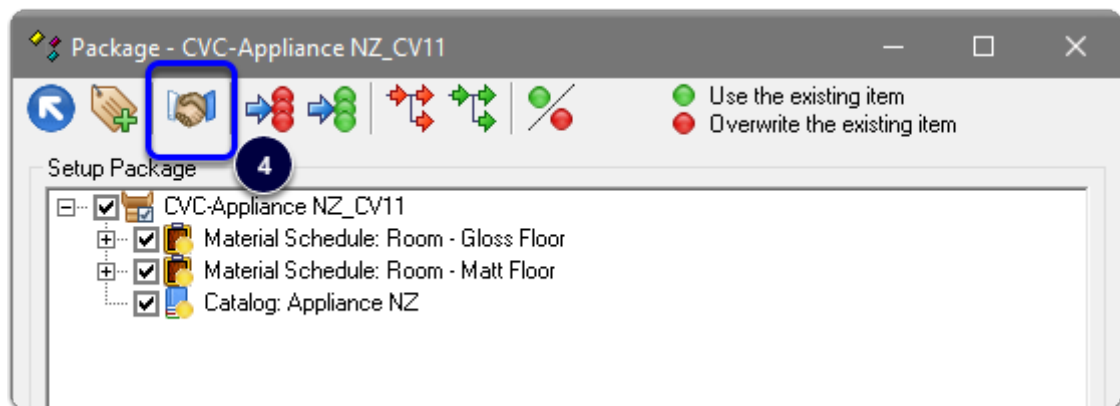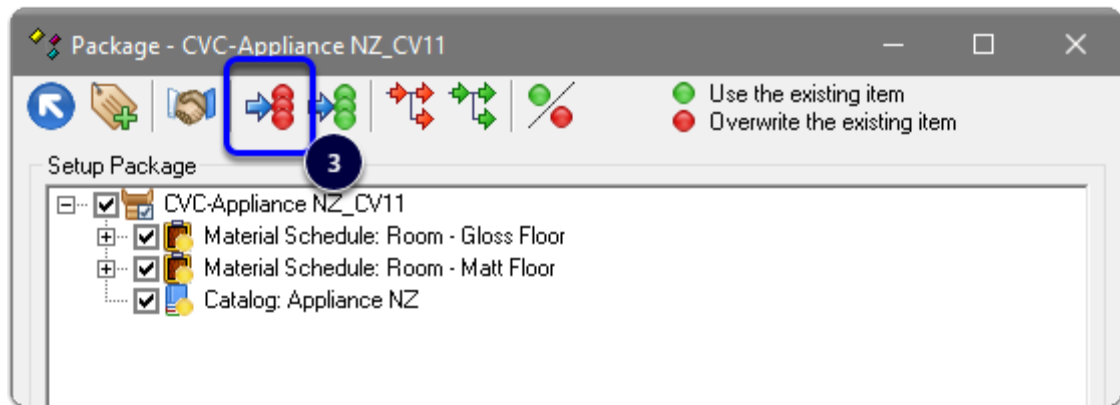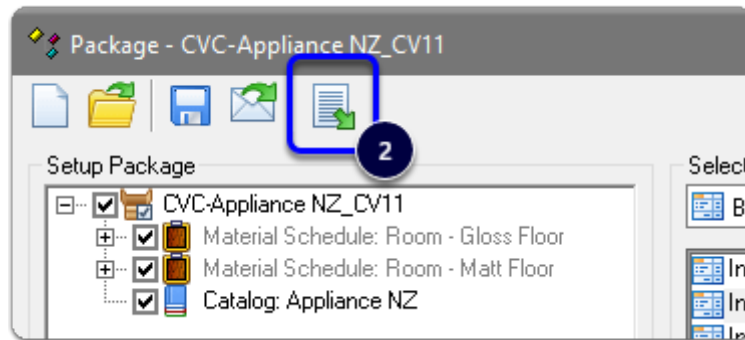

Apps to make Cabinet Vision work for you.

Autoshape Corner 90 Parts - Package Import

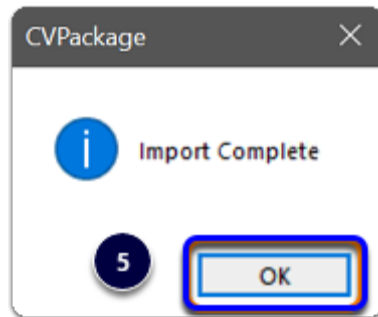

Import Complete - You're nearly done - Continue on to the 'Post Import Cleanup'...