


## Kesseböhmer iMove Shelf Lift - User Guide

### 💡 Contents of this Article...



- Create your iMove Cabinet - Cabinet Level Selections - Section Cabinet
- IMPORTANT: Lock Height
- iMove Tray Open Position

### Create your iMove Cabinet & Cabinet Level Selections



1. Place Upper Cabinet and set the width to 600mm (or 900mm)
2. Cabinet Level Section View > Delete All
3. Erase All Face and Interior Parts
4. Cabinet Properties - Construction
5. Cabinet Properties - Material
6. Cabinet Properties - Hardware
7. Section Interior > Horizontal Split
8. Select Adjustable Shelf > Change to Roll Out Tray
9. Lock Height
10. Set Height to open section under the Tray
11. Lock Height

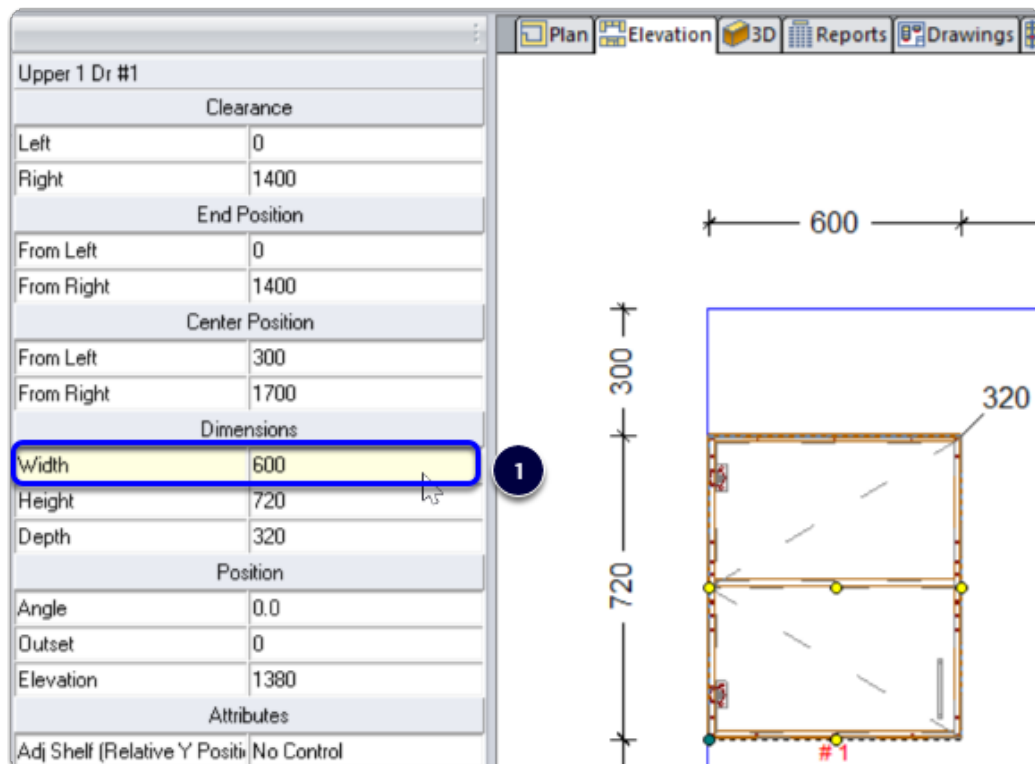



# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

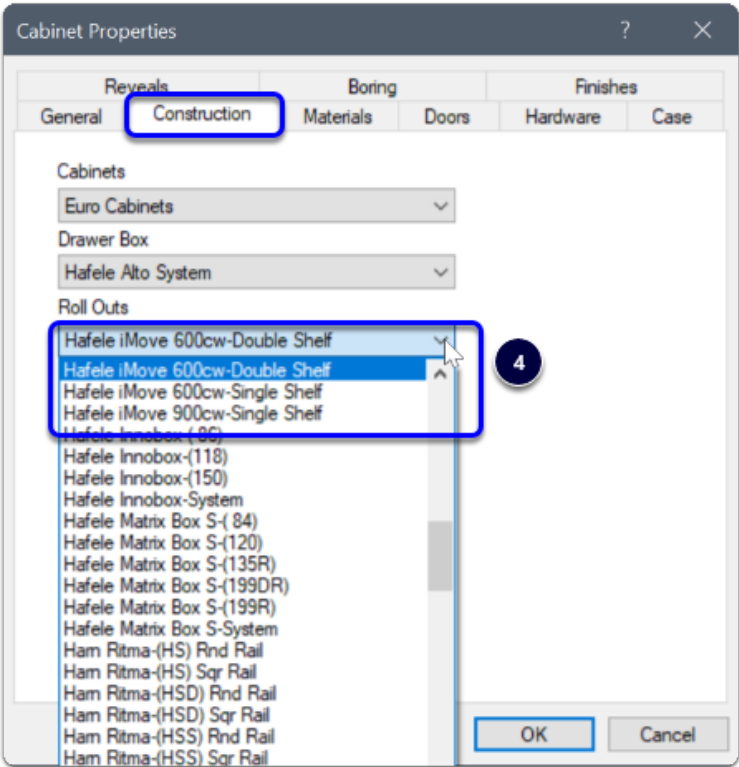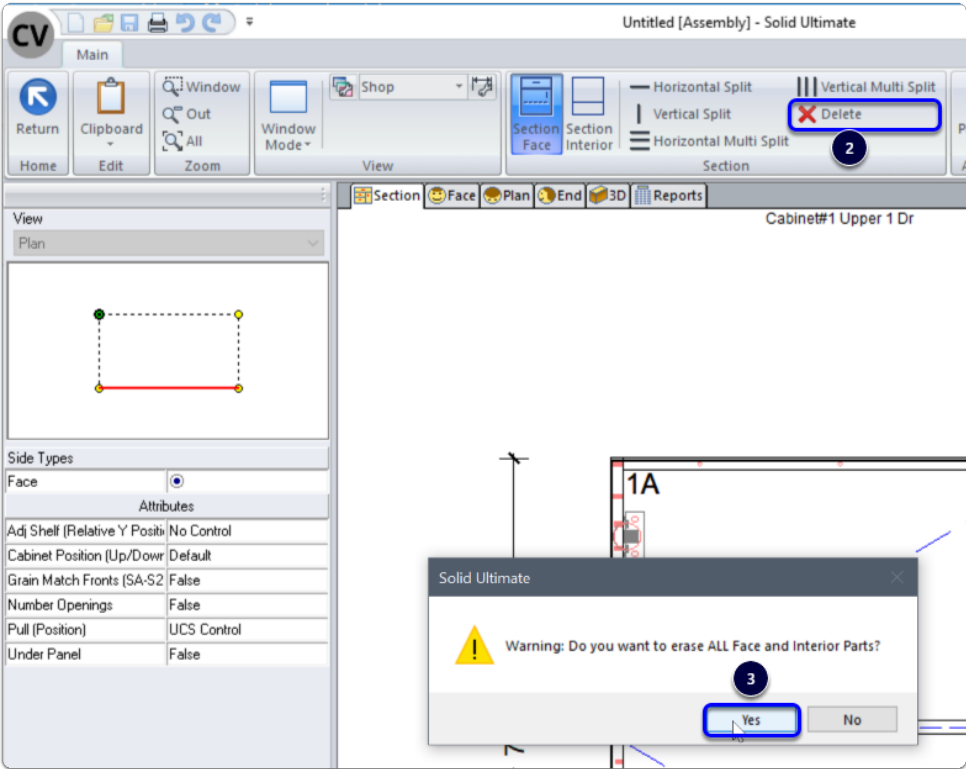



# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

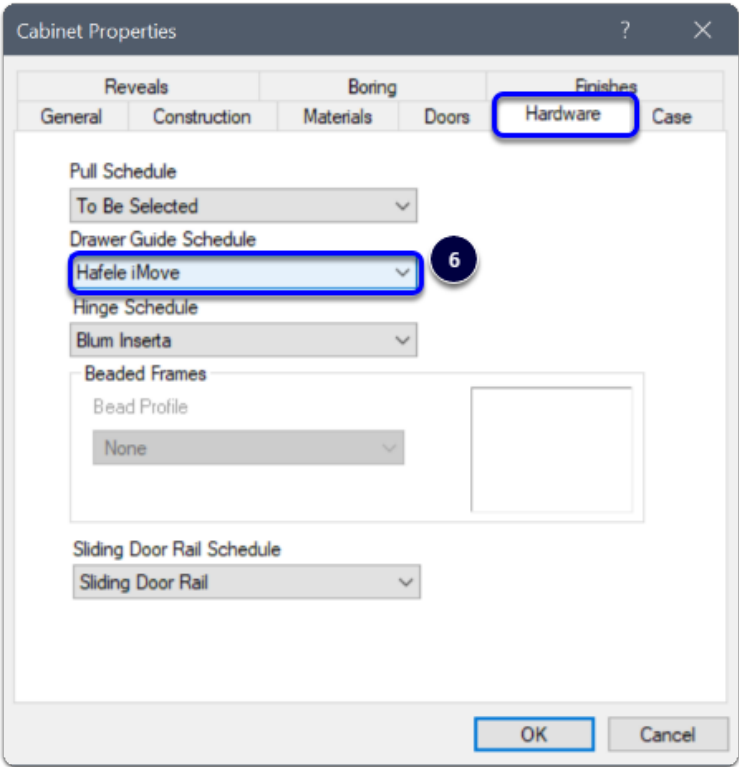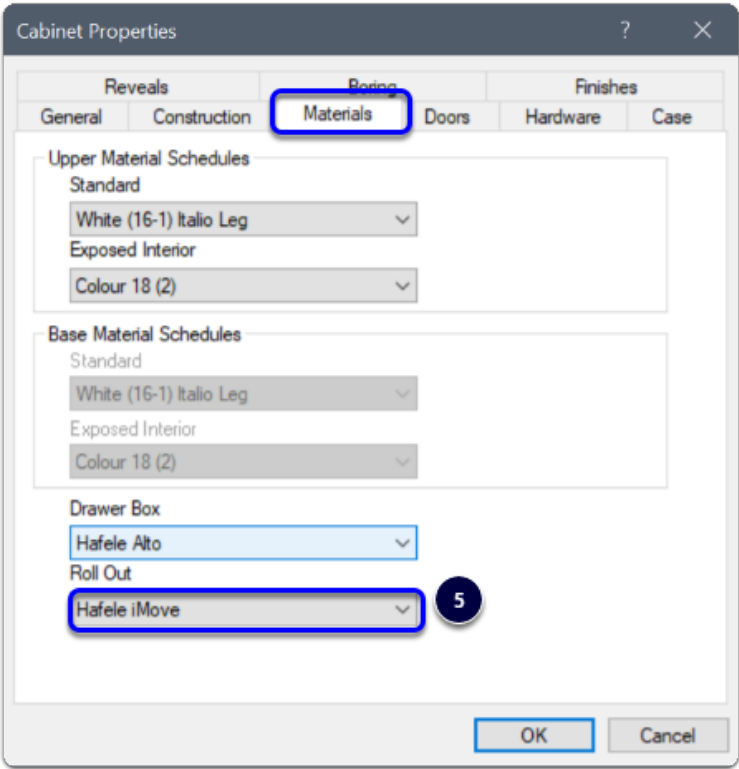


# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

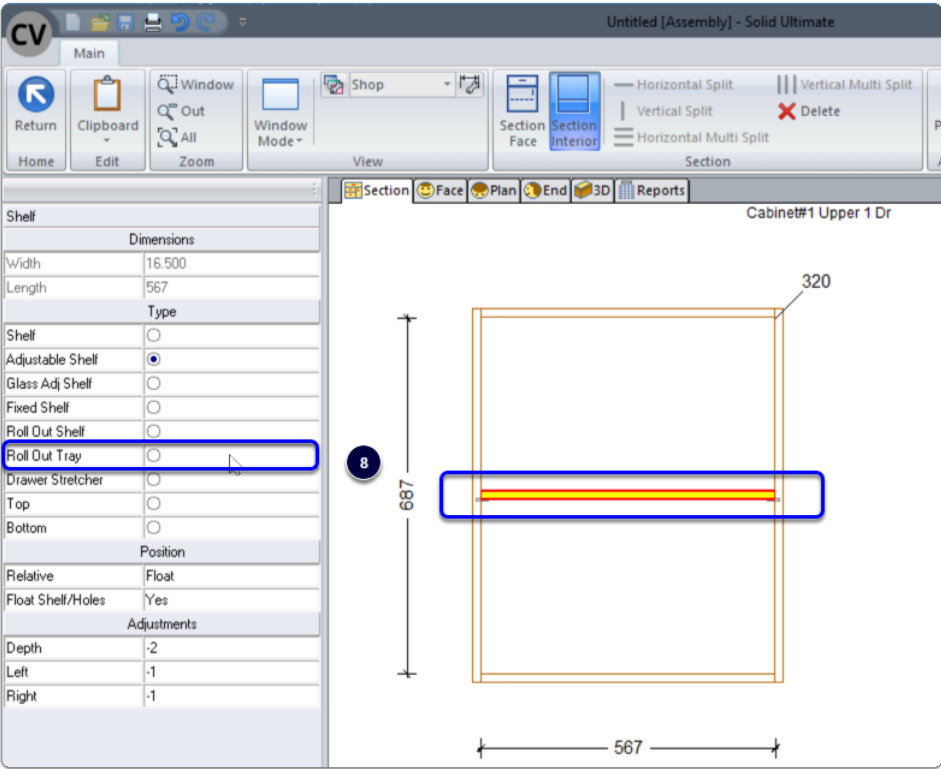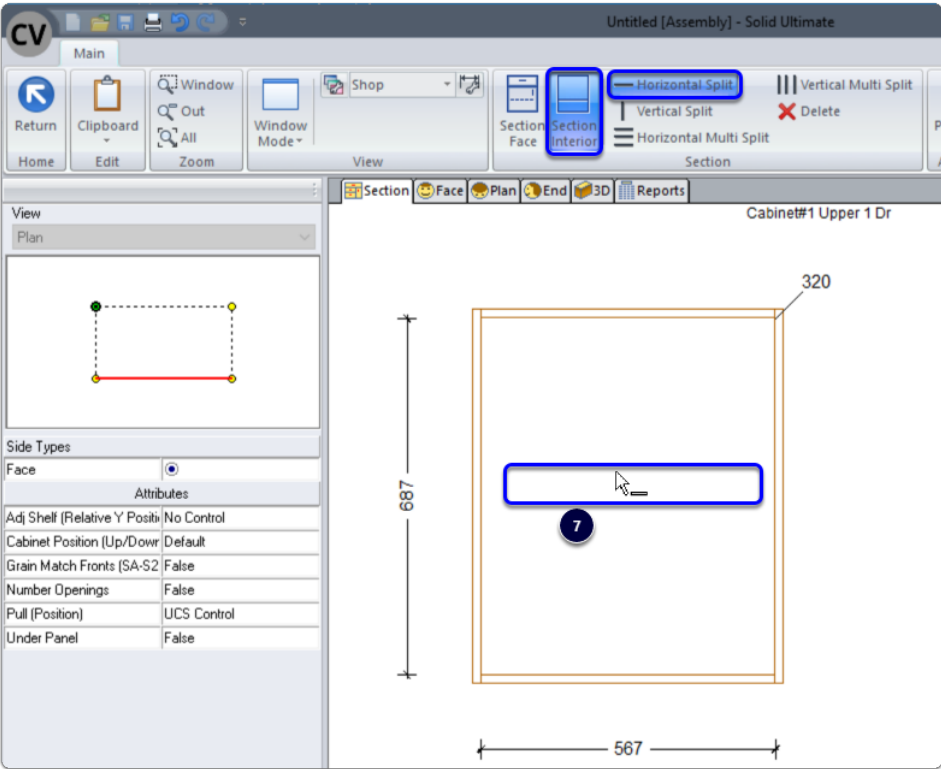

# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

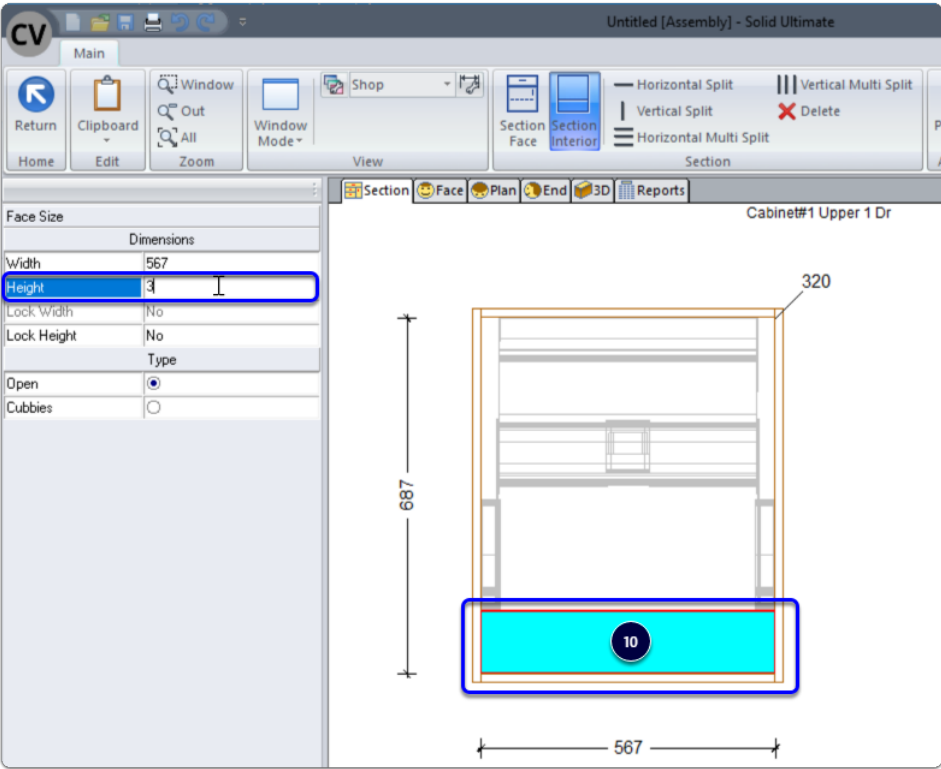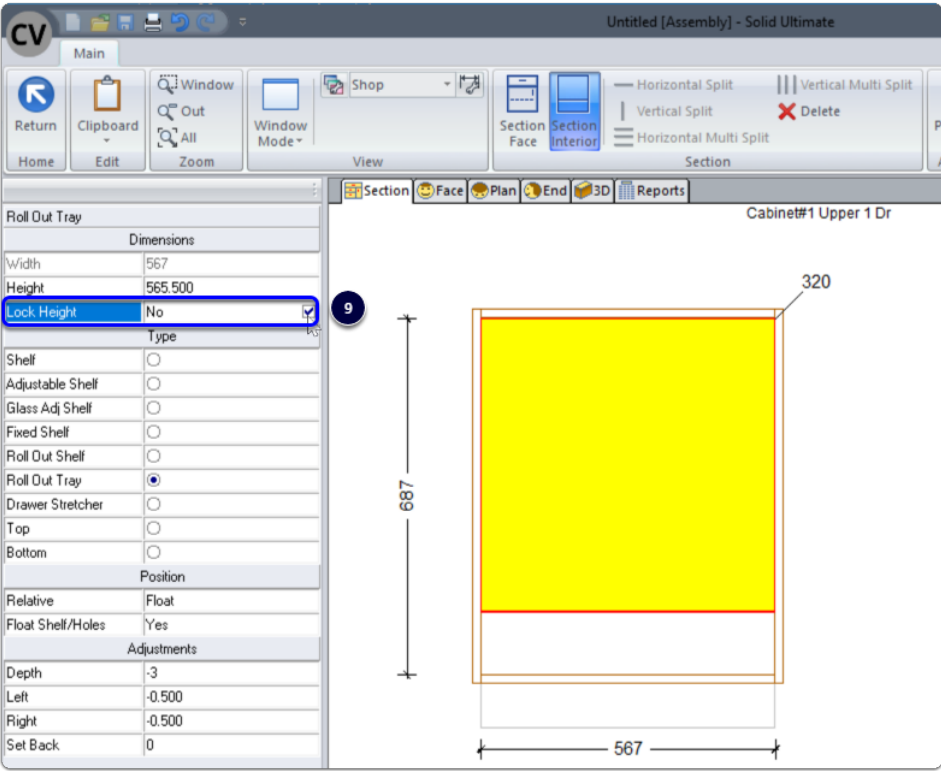

# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

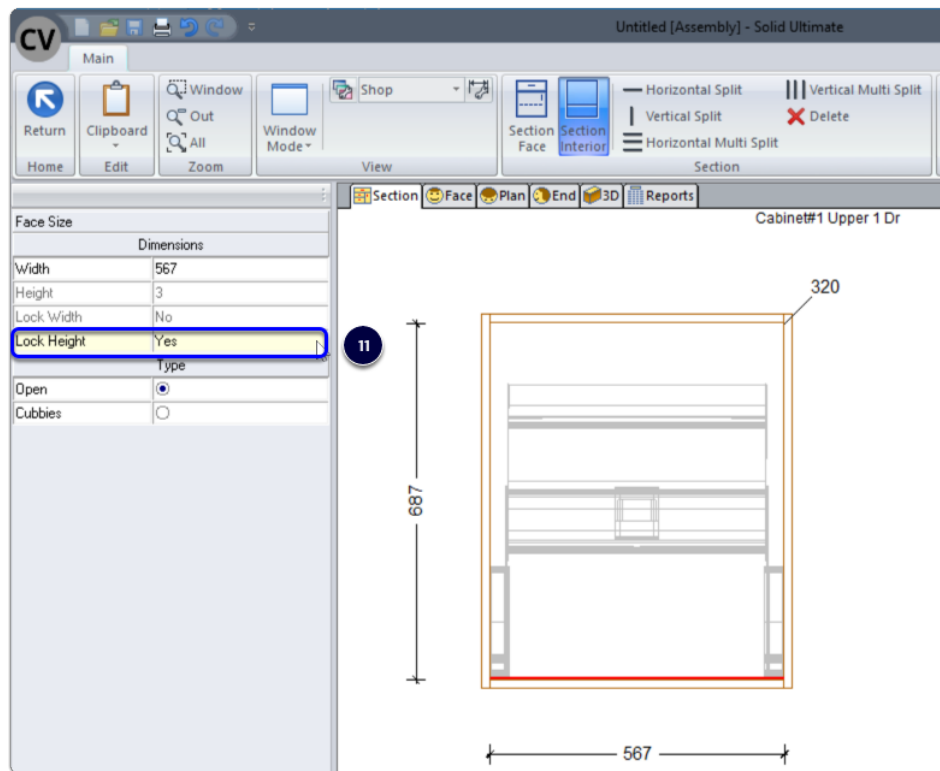



**! IMPORTANT** - Remember: Roll Out Tray > Lock Height

1. Select Roll Out Tray
2. Lock Height

## iMove Tray Open Position

1. Section View > Right Click Roll Out Tray > Properties
2. Open using slider

# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

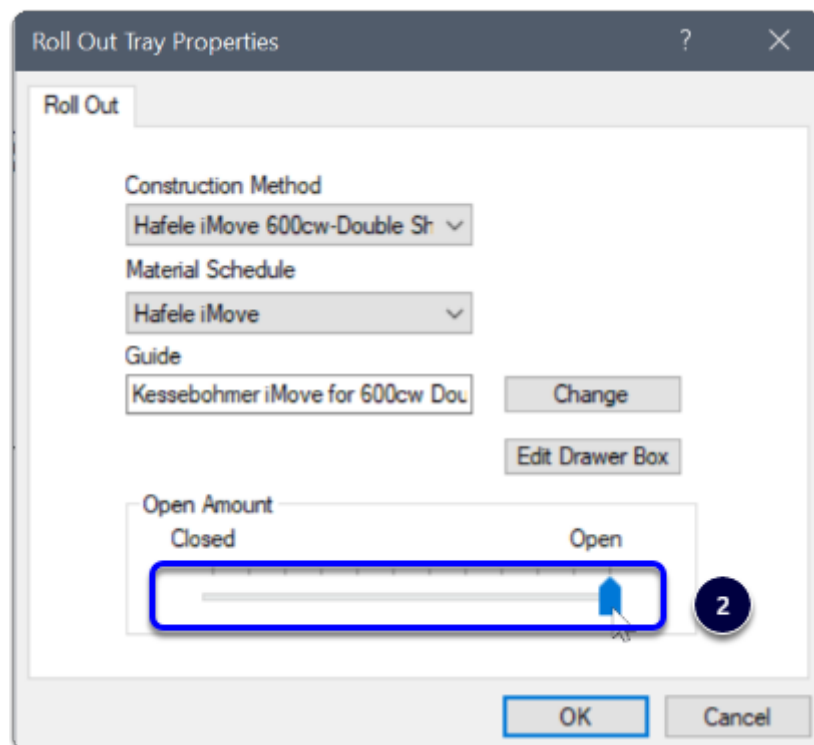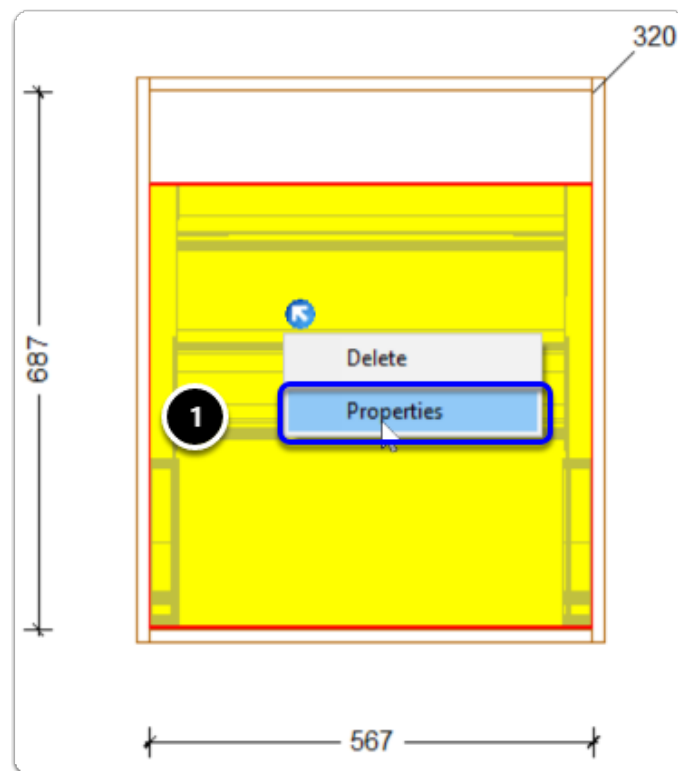

# Cabinet Vision Training - Kesseböhmer iMove Shelf Lift - User Guide

